



# Installation Manual

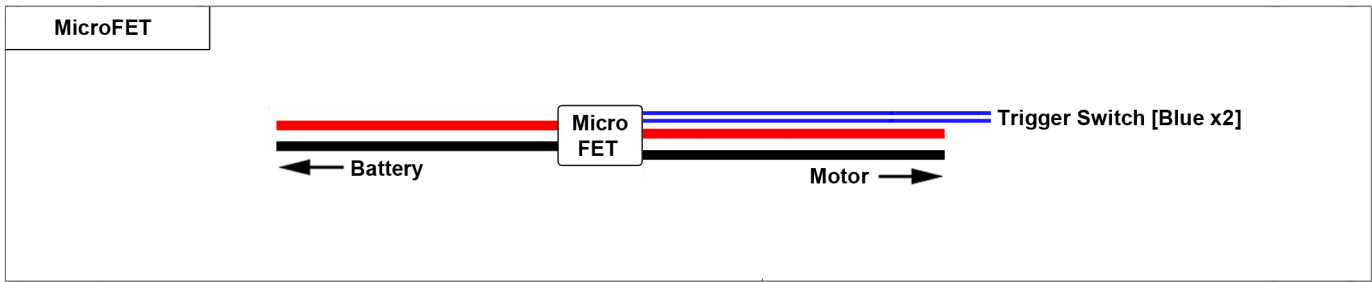

## Trigger Wiring Installation

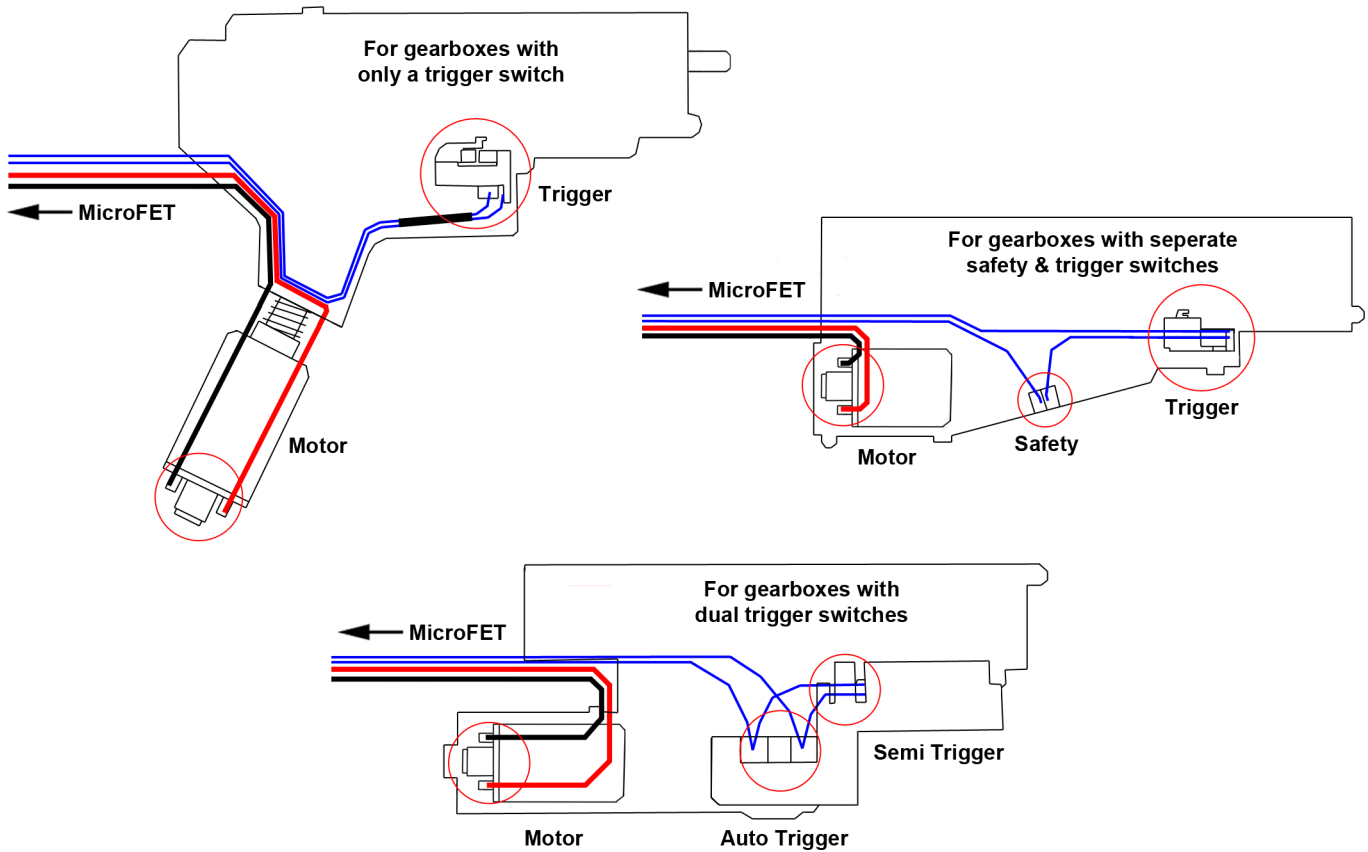

### INSTALLATION:

- 1) Attach the large red and black wires on the motor side of the controller directly to the motor. Add connectors where needed.
- 2) Take the trigger wires (blue pair) and solder them to the trigger assembly as shown in the above diagrams.

**End of Installation!**